
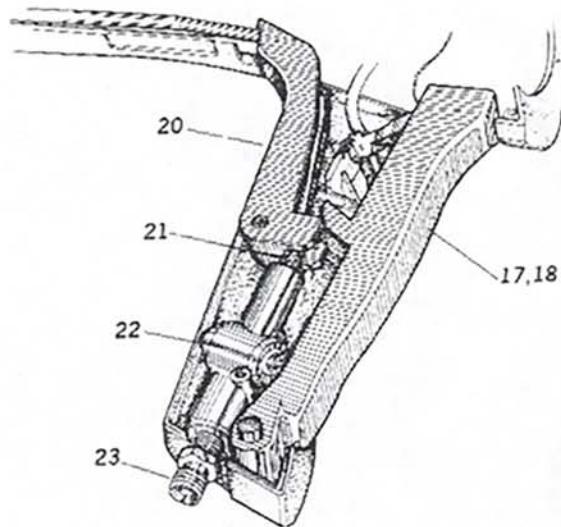


SHRINKFAST Model 998 Parts List

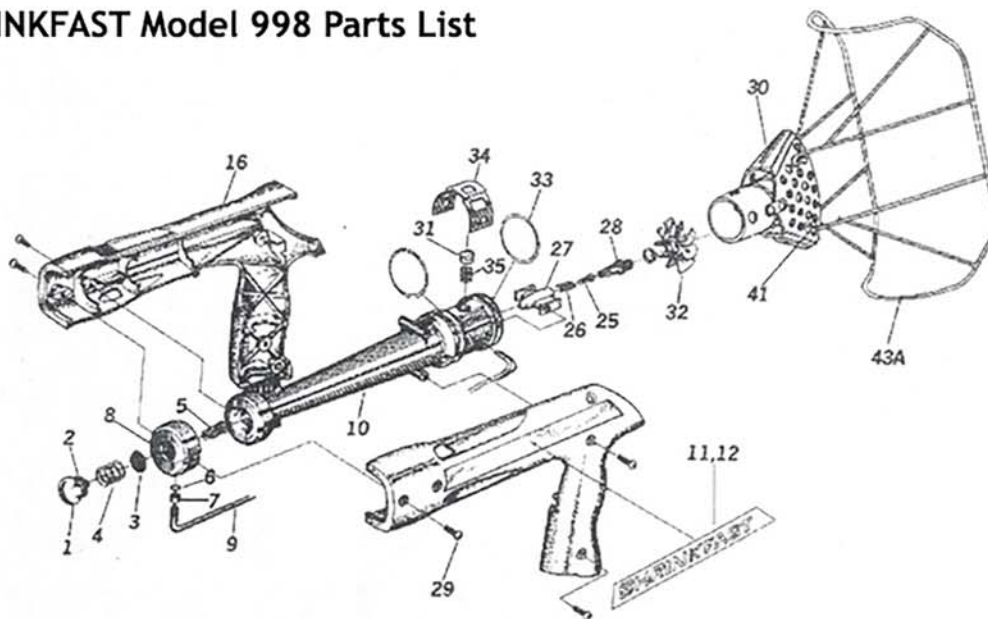

Key	Description	Key	Description
1	Filter Holder	25	Contact Screw
2	"O" Ring	26	Contact Spring
3	Filter (disc)	27	Socket
4	Filter Spring	28	Spark Plug
5	Orifice Assy.	29	Assy. Screws
6&24	"O" Ring	30	Combustor
7	Retainer	31	Button
8	Inlet	32	Flameholder
9	Fuel Line	33	"O" Ring
10	Pump Body	34	Strap
11	Label, RH	35	Button Spring
12	Label, LH	36A	Hose Assy-US (Not Shown)
14	Name Plate, Euro (Not Shown)	37A	Regulator (Not Shown)
15	Housing, RH	38-1	POL Fitting (Not Shown)
16	Housing, LH	39	Gauge (Not Shown)
17&18	Trigger/Igniter Assy.	40	Metal Box (Not Shown)
20	Safety	41	Guard Screw
21	Spring	41	UL Guard
22	Valve Assy.	43A	Wrench-US (Not Shown)
23A	Hose Adapter-US	44A	